




1. Pentru a accesa pagina de administrare a modemului Connect Box, deschide un browser si introdu in address bar: **192.168.0.1**

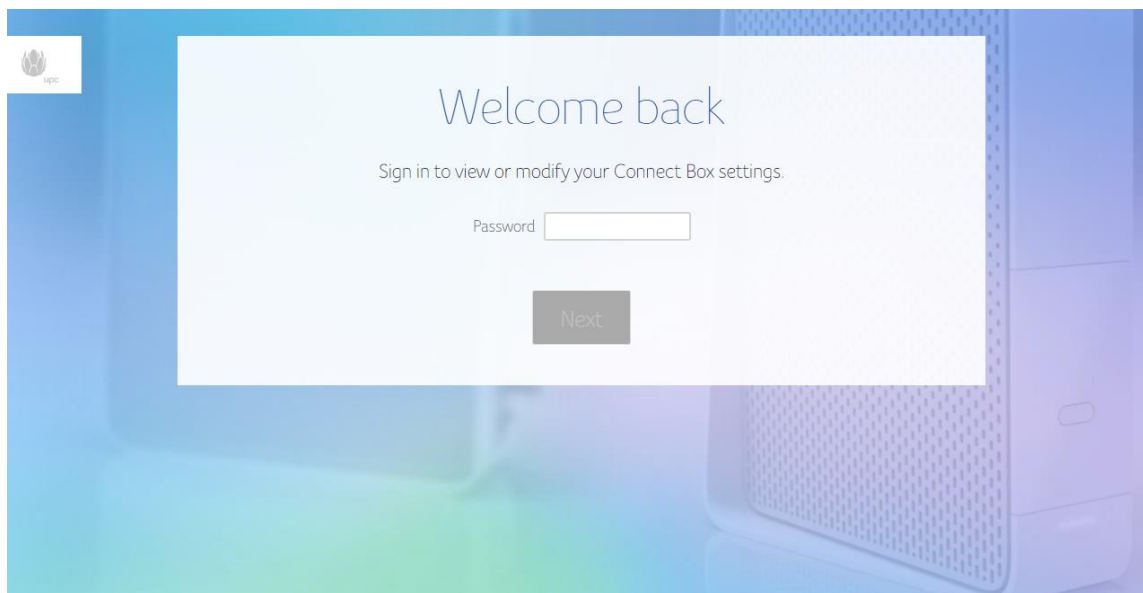

2. Introdu parola de acces aflata pe eticheta modemului tau in campul **Settings Password**





### 3. Pentru a modifica numele rețelei WiFi (SSID), mergi la meniul **Advanced Settings -> Wireless -> Security -> WiFi Network Name (SSID)**

The screenshot shows the eero WiFi configuration page. At the top, there is a navigation bar with the eero logo, a 'Log out' button, and a language dropdown set to 'English'. The main content area is titled 'WiFi configuration' and is divided into two sections: '2.4 GHz Wireless Security Settings' and '5 GHz WiFi configuration'. Both sections have identical settings: 'WiFi Network Name (SSID)' is 'Cosmin 2.4GHz' (or 'Cosmin 5GHz'), 'WiFi Network Name (SSID) broadcast' is checked, 'Security' is 'WPA-PSK/WPA2-PSK', and 'WiFi password (security key)' is 'Cosmin2020!'. A security strength indicator shows 'Good'. Below these sections is an 'Apply changes' button. The 'Wireless MAC filtering' section is currently 'Disabled'. The 'Attached devices' section shows a table with three devices: 'Cosmin-iPhone', 'ROW5003883', and 'RedmiNote8T-Redmi'. Below this is an 'Add device' form with fields for 'Device name', 'MAC address', and 'Wireless radio' (2.4GHz, 5GHz, or Both). At the bottom, there is a 'Wireless filter list' section which is currently empty, with a message: 'You have not selected a device to filter. Please select a device from the attached devices list.' Another 'Apply changes' button is at the very bottom.

Home

Connected devices

Modem mode

Advanced settings

- Wireless
  - Wireless signal
  - Security
  - Guest network
  - WPS
- Security
- DHCP
- IPv6
- Tools
- Admin

### WiFi configuration

#### 2.4 GHz Wireless Security Settings

WiFi Network Name (SSID)

WiFi Network Name (SSID) broadcast  Yes  No

Security

WiFi password (security key)

Good

#### 5 GHz WiFi configuration

WiFi Network Name (SSID)

WiFi Network Name (SSID) broadcast  Yes  No

Security

WiFi password (security key)

Good

[Apply changes](#)

#### Wireless MAC filtering

This section allows configuration of MAC address filters in order to block or only allow internet traffic to specific devices on your WiFi network.

Disabled  
 Allow  
 Deny

#### Attached devices

[Refresh](#)

	Device name	MAC address	Connected to
<input type="radio"/>	Cosmin-iPhone	08 F6 9C 91 E9 70	Wi-Fi 5G Cosmin 5GHz
<input type="radio"/>	ROW5003883	48 51 B7 78 18 FA	Wi-Fi 5G Cosmin 5GHz
<input type="radio"/>	RedmiNote8T-Redmi	28 16 7F 6C E1 90	Wi-Fi 5G Cosmin 5GHz

#### Add device

Device name

MAC address

Wireless radio  2.4GHz  5GHz  Both 2.4GHz and 5GHz

[Add device](#)

#### Wireless filter list

Device name	MAC address	Wireless radio	Delete
You have not selected a device to filter. Please select a device from the attached devices list.			

[Apply changes](#)



#### 4. Pentru a modifica parola de conectare la rețeaua WiFi (Security Key), mergi la meniul **Advanced Settings** -> **Wireless** -> **Security** -> **WiFi Password**

Log out | Language English

### WiFi configuration

#### 2.4 GHz Wireless Security Settings

WiFi Network Name (SSID)

WiFi Network Name (SSID) broadcast  Yes  No

Security

WiFi password (security key)

Good

#### 5 GHz WiFi configuration

WiFi Network Name (SSID)

WiFi Network Name (SSID) broadcast  Yes  No

Security

WiFi password (security key)

Good

[Apply changes](#)

#### Wireless MAC filtering

This section allows configuration of MAC address filters in order to block or only allow internet traffic to specific devices on your WiFi network.

Disabled

Allow

Deny

#### Attached devices

[Refresh](#)

	Device name	MAC address	Connected to
<input type="radio"/>	Cosmin-iPhone	08:F6:9C:9E:19:70	Wi-Fi 5G Cosmin 5GHz
<input type="radio"/>	ROW5003883	48:51:B7:7B:1B:FA	Wi-Fi 5G Cosmin 5GHz
<input type="radio"/>	RedmiNote8T-Redmi	28:16:7F:6C:E1:90	Wi-Fi 5G Cosmin 5GHz

#### Add device

Device name

MAC address  :  :  :  :  :

Wireless radio  2.4GHz  5GHz  Both 2.4GHz and 5GHz

[Add device](#)

#### Wireless filter list

Device name	MAC address	Wireless radio	Delete
You have not selected a device to filter. Please select a device from the attached devices list.			

[Apply changes](#)



5. Pentru a seta canalul radio (Wireless Radio Channel) pentru banda de frecventa activa (2.4GHz si/sau 5GHz), mergi la meniu **Advanced Settings** -> **Wireless** -> **Wireless Signal** -> **Channel**

upc

Log out | Language English

## Wireless signal

Home

Connected devices

Modem mode

Advanced settings

- Wireless
  - Wireless signal
  - Security
  - Guest network
  - WPS
- Security
- DHCP
- UPnP
- Tools

Admin

### Wireless frequency 2.4GHz

Enable 2.4 GHz  Disable 2.4 GHz

Wireless mode: 802.11b/g/n mixed

Channel:  Manual  Auto Channel 1

Channel width: 20 MHz

### Wireless frequency 5GHz

Enable 5 GHz  Disable 5 GHz

Wireless mode: 802.11a/n/ac mixed

Channel:  Manual  Auto Channel 36

Channel width: 20/40/80 MHz

### Smart Wi-Fi

Enable Channel Optimization  Disable Channel Optimization ⓘ

Apply changes